

COFFEE program

coffeehouse

Coffee & tea

A solution for cafeterias and serving of the coffee in the restaurants. These shapes were developed together with the baristas and specialists for the coffee. Using the same existing standard shapes which can be combined together. We prepared three different shapes of the cups so that you could make a better selection.

Für jeden Kaffee die perfekte Lösung. Zusammen mit Baristas und Spezialisten entwickelte Formen, die untereinander kombiniert werden können. Insgesamt entstanden drei verschiedene Kaffeenserien, Sie haben die Qual der Wahl.





Ambassador

GIN0808
cup / Tasse
07 cl



DIV4507
cover / Deckel



GIN0805
cup / Tasse
5 cl



GIN0825
cup / Tasse
25 cl



AMB1711
saucer / Untertasse
12 cm

AMB1714
saucer / Untertasse
14 cm

DIX1715
saucer / Untertasse
16x11 cm



DIX1720
saucer / Untertasse
20x14 cm



GIN0818
cup / Tasse
18 cl



GIN0819
cup / Tasse
20 cl



GIN0628
cup / Tasse
28 cl



AMB1714
saucer / Untertasse
14 cm

AMB1714
saucer / Untertasse
14 cm

DIX1715
saucer / Untertasse
16x11 cm



DIX1720
saucer / Untertasse
20x14 cm

GINO

AMB0807
cup / Tasse
7 cl



AMB1711
saucer / Untertasse
12 cm

AMB0810
cup / Tasse
10 cl



AMB1711
saucer / Untertasse
12 cm

AMB0819
cup / Tasse
19 cl



AMB1714
saucer / Untertasse
14 cm

AMB0825
cup / Tasse
25 cl



AMB1716
saucer / Untertasse
16 cm

AMBASSADOR

Dixy

DIX0610
cup / Tasse
10 cl



DIX1715
saucer / Untertasse
16x11 cm



AMB1711
saucer / Untertasse
12 cm

DIX0630
cup / Tasse
30 cl



DIX1720
saucer / Untertasse
20x14 cm



DIX2120
plate flat / Teller flach
20x14 cm

DIX0619
cup / Tasse
19 cl



DIX1720
saucer / Untertasse
20x14 cm

DIX0624
cup / Tasse
24 cl



DIX1720
saucer / Untertasse
20x14 cm

DIX0829
cup / Tasse
29 cl



DIX1720
saucer / Untertasse
20x14 cm



AMB1714
saucer / Untertasse
14 cm



DIX2115
plate flat / Teller flach
16x11 cm

DIXY

