



LIFESTYLE

discover colors of your fine dining
entdecken Sie die Farben

design by: Studio G.Benedikt



LIFESTYLE
NATURAL



LSN 2117
PLATE | TELLER
17 cm

LSN 2120
PLATE | TELLER
20 cm

LSN 2126
PLATE | TELLER
26 cm

LSN 2128
PLATE | TELLER
28 cm

LSN 2131
PLATE | TELLER
31 cm



LCN 2116
COUP PLATE | COUP TELLER
16 cm

LCN 2127
COUP PLATE | COUP TELLER
27 cm

LSN 2130
PIZZA PLATE | PIZZATELLER
30 cm

LCN 2124
COUP PLATE | COUP TELLER
24 cm

LCN 2121
COUP PLATE | COUP TELLER
21 cm



LSN 1922
DEEP PLATE | TELLER TIEF
22 cm



LSN 1929
PASTA | PASTATELLER
29 cm



LCN 1926
COUP PASTA | PASTATELLER
26 cm

LIFESTYLE
NATURAL



LSN 3020
OVAL 20 cm

LSN 3028
OVAL 28 cm

LSN 3032
OVAL 32 cm

LSN 4550
LID FOR SOUP BOWL
DECKEL FÜR SUPPENTASSE



LSN 1250
SOUP BOWL | SUPPENTASSE
50 cl



LSN 1139
SOUP BOWL | SUPPENTASSE
39 cl



LSN 9603
SAUCER FOR SOUP BOWL
UNTERTASSE FÜR SUPPENTASSE
17 cm



LSN 0309
DIP BOWL
DIP SCHALE
9 cl



LSN 0209
CUP | TASSE
9 cl



LSN 0215
CUP | TASSE
15 cl



LSN 0222
CUP | TASSE
22 cl

LSN 0030
MUG 30 cl



LSN 1712
SAUCER | UNTERTASSE
12 cm



LSN 1713
SAUCER | UNTERTASSE
13 cm



LSN 1715
SAUCER | UNTERTASSE
15 cm

LSN 0640
MUG 40 cl



LSN 5010
PEPPER SHAKER
PFEFFERSTREUER



LSN 5090
SALT SHAKER
SALZSTREUER



LSN 4906
TOOTHPICK HOLDER
ZAHNSTOCHERBEHÄLTER

LSN 3510
CREAMER | GIESSER
10 cl



LSN 3604
CREAMER | GIESSER
4 cl




LIFESTYLE
ARTICBLUE



LCA 2121
COUP PLATE | COUP TELLER
21 cm

LSA 2130
PIZZA PLATE | PIZZATELLER
30 cm

 

LCA 2116
COUP PLATE | COUP TELLER
16 cm



LSA 3020
OVAL 20 cm



LSA 1713
SAUCER | UNTERTASSE
13 cm



LCA 1926
COUP PASTA | PASTATELLER
26 cm



LSN 0215
CUP | TASSE
15 cl



LSA 4906
TOOTHPICK HOLDER
ZAHNSTOCHERBEHÄLTER



LSA 5010
PEPPER SHAKER
PFEFFERSTREUER

LIFESTYLE
DEEPLAGOON



LCD 2124
COUP PLATE | COUP TELLER
24 cm



LSD 2130
PIZZA PLATE | PIZZATELLER
30 cm



LCD 1926
COUP PASTA | PASTATELLER
26 cm



LSN 0209
CUP | TASSE
9 cl

LSD 1415
BOWL | SCHÜSSEL
15 cm



LSD 0309
DIP BOWL | DIP SCHALE
9 cl



LSD 0640
MUG 40 cl



LSD 1712
SAUCER | UNTERTASSE
12 cm



LIFESTYLE
COCOA



LIFESTYLE
HIGHLAND



LIFESTYLE
RAINFOREST



LSR 2120
PLATE | TELLER
20 cm

LSR 2126
PLATE | TELLER
26 cm

LSR 2128
PLATE | TELLER
28 cm

LSR 1922
DEEP PLATE | TELLER TIEF
22 cm



LSR 1929
PASTA | PASTATELLER
29 cm

LSR 3028
OVAL 28 cm

LSR 3032
OVAL 32 cm



LSR 1413
BOWL | SCHÜSSEL
13 cm

LSR 1417
BOWL | SCHÜSSEL
17 cm

LSR 1421
BOWL | SCHÜSSEL
21 cm

LSR 2130
PIZZA PLATE | PIZZATELLER
30 cm

LSR 0030
MUG 30 cl

LSN 0222
CUP | TASSE
22 cl

LSN 4550
LID FOR SOUP BOWL
DECKEL FÜR SUPPENTASSE

LSN 1250
SOUP BOWL | SUPPENTASSE
50 cl

LSR 1715
SAUCER | UNTERTASSE
15 cm

LSR 9603
SAUCER | UNTERTASSE
17 cm

LIFESTYLE
VOLCANO



LSV 2130
PIZZA PLATE
PIZZATELLER
30 cm

LCV 2124
COUP PLATE
COUP TELLER
24 cm

LCV 2116
COUP PLATE
COUP TELLER
16 cm

LSV 0640
MUG 40 cl

LCV 1926
COUP PASTA | PASTATELLER
26 cm

LSV 1712
SAUCER | UNTERTASSE
12 cm


LSN 0209
CUP | TASSE
9 cl

LSV 0309
DIP BOWL | DIP SCHALE
9 cl

LSV 1417
BOWL | SCHÜSSEL
17 cm

LSV 3510
CREAMER | GIESSER
10 cl

LSV 3604
CREAMER | GIESSER
4 cl

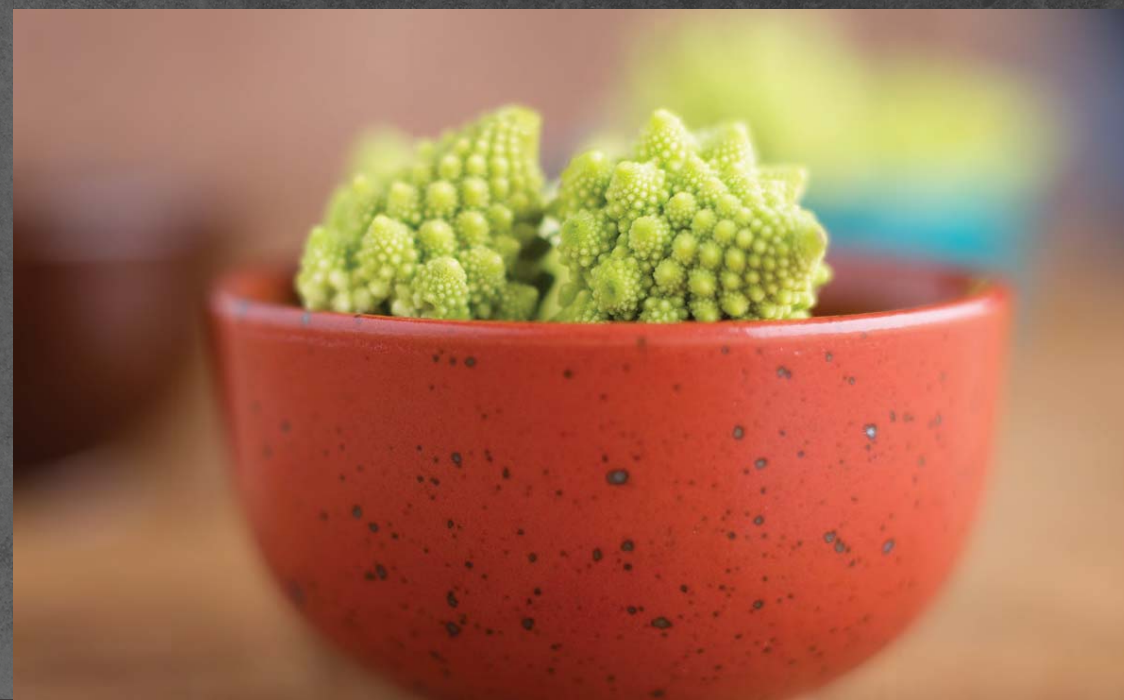

LIFESTYLE

EBONY



LCE 2121
COUP PLATE | COUP TELLER
21 cm



LCE 1926
COUP PASTA | PASTATELLER
26 cm

LSE 2130
PIZZA PLATE | PIZZATELLER
30 CM



LSE 0309
DIP BOWL | DIP SCHALE
9 cl



LSE 1415
BOWL | SCHÜSSEL
15 cm



LSE 1712
SAUCER | UNTERTASSE
12 cm



LSN 0209
CUP | TASSE
9 cl

LIFESTYLE

TERRACOTTA



LST 2120
PLATE | TELLER
20 cm

LST 2128
PLATE | TELLER
28 cm



LST 2130
PIZZA PLATE | PIZZATELLER
30 cm



LST 1929
PASTA | PASTATELLER
29 cm



LST 3032
OVAL 32 cm

LST 3028
OVAL 28 cm



LST 1715
SAUCER | UNTERTASSE
15 cm



LSN 0222
CUP | TASSE
22 cl




LST 1421
BOWL | SCHÜSSEL
21 cm



LST 9603
SAUCER | UNTERTASSE
17 cm



 LSN 4550
LID FOR SOUP BOWL
DECKEL FÜR SUPPENTASSE



LSN 1250
SOUP BOWL
SUPPENTASSE
50 cl

